

**Ages 14+**



# UDI'WING D

Equipped with 120° wide-angle 720P HD WIFI Camera  
**Foldable & Portable**



## **U29**

# **Operations Guide**

# Catalog

<b>Important Statement</b> .....	3
<b>Safety Precautions</b> .....	3
<b>Safe Notice for Drone Battery</b> .....	4
<b>Charging Instruction for Drone Battery</b> .....	5
<b>Check List Before Flight</b> .....	5
<b>Instruction for Drone and Transmitter</b> .....	6
<b>Pre-flight Operation Instruction</b> .....	11
<b>Functions Introduction</b> .....	14
<b>To know your APP</b> .....	16
<b>VR-2 Operation Instruction</b> .....	21
<b>Spare Parts Installation Instruction</b> .....	24
<b>Spare Parts</b> .....	25
<b>Troubleshooting Guide</b> .....	27

# Important Statement

Thank you for buying UDIRC's product. People who under 14 years old must not use the product. Please read this brochure carefully before using the product. You are regarded as accepting all content in this user manual when using this drone.

This product is not an ordinary toy but a piece of complicated equipment which is integrated with professional knowledge by mechanic, electronic, air mechanics, high-frequency emission etc. The users promise to be responsible for their behavior when using this product and relevant APP. The users promise to use the drone and relevant APP for legal purpose, and agree to obey above rules and local laws and regulations.

We undertake no liability for those accidents caused by environment, illegal behavior, improper operation and refitting of the drone after sale of the product.

We have entrusted the distributor to provide technology support and after-sale service. If you have any questions about use, operation, repair etc., please contact the local distributor.

**Please only use attached spare parts or purchase original UDIRC accessories for replacement, or if lead to any accident, we UDIRC do not assume any responsibility.**

**\* Keep the packing and user manual so as to refer to the important information whenever.**

## Safety Precautions

This drone is suitable for experienced RC drone user aged 14 years or above. This product contains small parts, please put it out of child's reach.

### (1) Flying Area

The flying field must be legally approved by your local government. Do not fly the drone near in the airport. Keep far away from the airport more than 5km when flying a RC drone. Flying field must spacious enough and we suggest at least 8M (length)\*8M (width)\*5M (height).

### (2) Use correctly

Improper assembly, broken main frame, defective electronic equipment or unskilled operation all may cause unpredictable accidents such as drone damage or human injury. Please pay special attention to safety operation and have good knowledge of accident responsibility that the user may cause.

### (3) Keep away from obstacles and crowd

The speed and status of a flying RC drone is uncertain and it may cause potential danger. So the user must keep away from crowd, tall building, power lines etc. when operating a flying RC drone. Do not fly a RC drone in rainy, storm, thunder and lighting weather for the safety of user, around people and their property.

**(4) Keep away from humid environment**

The drone inside is consisted of precise electronic components. Humidity or water vapor may damage electronic components and cause accident.

**(5) Safe operation**

Please operate the RC drone in accordance with your physical status and flying skill. Fatigue, listlessness and improper operation may increase the rate of accident.

**(6) Keep away from rotating parts**

Rotating parts like propellers or motors may cause serious injury and damage. Keep face and body away from rotating parts.

**(7) Keep away from heat**

The RC drone is made of metal, fiber, plastic, electronic components etc. Keep away from heat and sunshine to avoid distortion and damage.

**(8) The drone should be controlled within max control distance. Do not fly the drone near tall building, high voltage cable or other place with signal interference. Or may cause signal interruption and the drone will be out of control, which may result in accident.**

**(9) Do not touch the hot motor to avoid being burnt.**

**(10) Please use the recommended charger only. Power off the drone before cleaning the RC drone. Check the USB cable, charging plug etc. regularly to ensure they can work well. If there is any damage, stop using it immediately till it's fixed well.**


## **Safe Notice for Drone Battery**

- \* Do not put the battery on high temperature place, such as fire or heating device to avoid damage or explode.
- \* Do not use the battery to crash or hit hard surface.
- \* Do not put the battery in water and keep it in dry place.
- \* Do not open the battery.
- \* Do not leave the battery without supervision when charging.
- \* Make sure that there is no short circuit of the power wire.
- \* Please use the recommended charger only.
- \* Check the charger's wire, plug, surface regularly. Do not use any broken charger.
- \* If do not fly the drone more than one week, maintain the drone battery with about 50% power to keep its performance and working life.

# Charging Instruction for Drone Battery

1. Connect the drone battery with USB cable first and then choose one of the method as below picture shown to connect with USB plug.
2. The red USB indicator light keeps bright when charging and the light turns green when fully charged.

**\* For faster charging, it is recommended to use an adapter with 5V 2A output current (not included) to charge the battery**

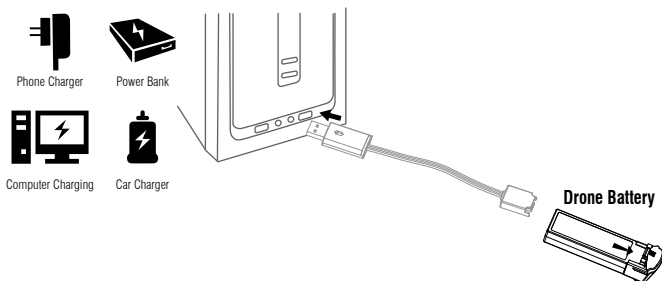

## Li-Po Battery Disposal & Recycling

Wasted Lithium-Polymer batteries must not be placed with household trash. Please contact local environmental or waste agency or the supplier of your model or your nearest Li-Po battery recycling center.




# Check List Before Flight

1. Make sure the drone battery and transmitter battery are fully charged.
2. Make sure the Left Stick of the transmitter in the middle position.
3. Please strictly obey the order of turn on and turn off before operation. Turn on the transmitter power first and then turn on the drone power before flying; turn off the drone power first and then turn off the transmitter power when finish flying. Improper turn on and turn off order may cause the drone out of control and threaten people's safety. Please cultivate a correct habit of turn on and turn off.
4. Make sure the connection is solid between battery and motor etc. The ongoing vibration may cause bad connection of power terminal and make the drone out of control.
5. Improper operation may cause drone crash, which may arouse motor defective and noise, and then effect the flying status or even stop flying. Please go to the local distributor to buy new parts for replacement so that the drone will return to its best status.

# Instruction for Drone and Transmitter


## Drone

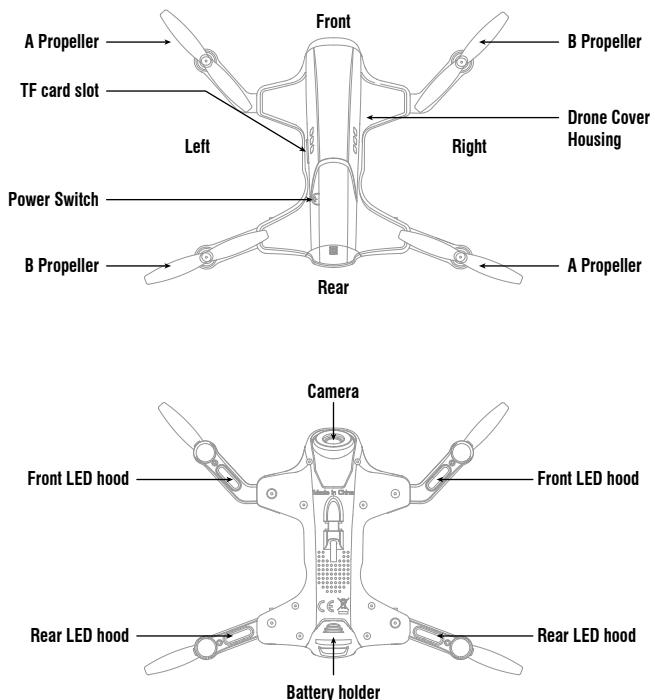

## Specification

Drone unfolded size	164.5x195.2x40.5mm	Charging Time for Drone Battery	60~70mins
Drone folded size	116.5x77.6x40.5mm	Max Flying Distance/Radius	80m
Fly Weight	96.2g	Streaming video Range	40m
Propeller Diameter	66mm	Camera Resolution	1280x720P
Flying Time	6~7mins	Frequency	2.4Ghz
Drone Battery	3.7Vx2 350mAh	Main Motor	8520x4


# Exploded View

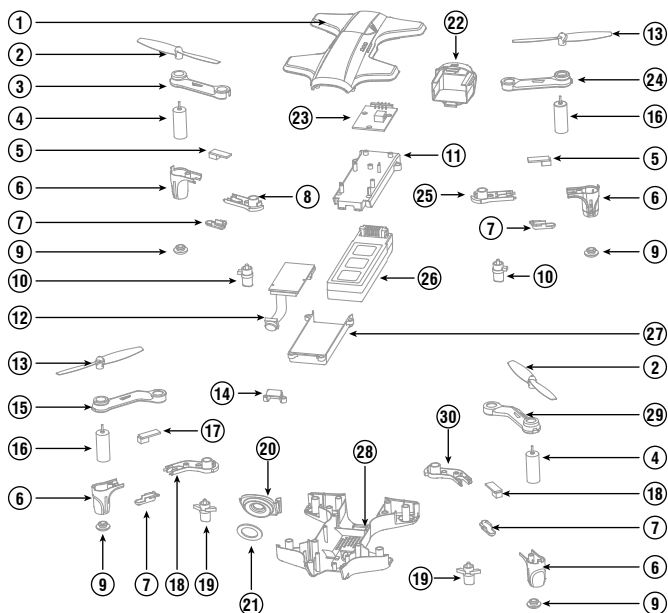


No.	Name	No.	Name	No.	Name
1	Drone cover housing	11	Battery upper holder	21	Camera Lens
2	A Propeller (Clockwise)	12	Camera board	22	Drone bottom housing
3	Right rear bracket upper cover	13	B Propeller (Counterclockwise)	23	Receiver board
4	Clockwise Motor (Red connector)	14	Camera holder	24	Left rear bracket top cover
5	Rear LED board( Red)	15	Right front bracket Upper cover	25	Left rear bracket lower cover
6	Motor holder	16	Counterclockwise Motor ( White connector)	26	Lipo battery set
7	LED hood	17	Front LED board( Green)	27	Battery lower holder
8	Right rear bracket lower cover	18	Right front bracket lower cover	28	Drone bottom housing
9	Cushion	19	Front self-locking key	29	Left front bracket upper cover
10	Rear self-locking key	20	Camera head cover	30	Left front bracket lower cover

## Unfold bracket

Pull out the arm bracket as per the below arrow shows (picture 1) , it will make a click sound, then it means fully opened (picture 2). On the contrary, then it's folded.

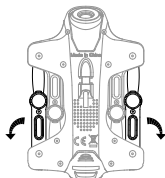


Picture 1

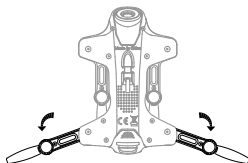


Picture 2

Pull out the arm bracket as per the below arrow shows (picture 3) , it will make a click sound, then it means fully opened (picture 4). On the contrary, then it's folded.

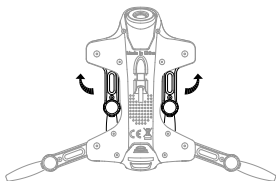


Picture 3

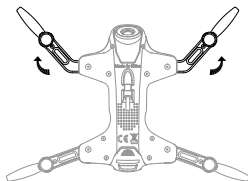


Picture 4

**Notice:** Improperly operation may cause damage to the bracket part.

## Transmitter

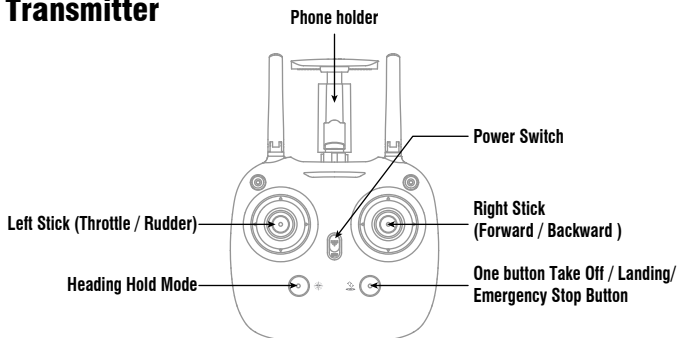




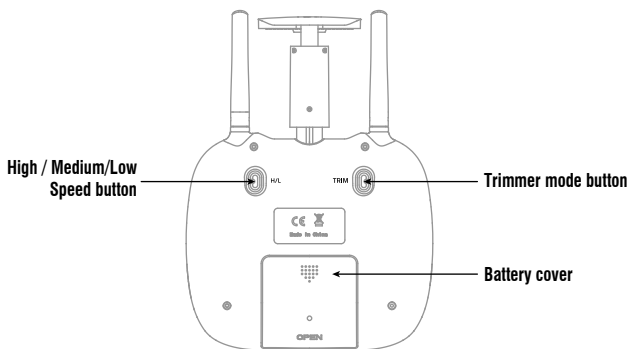


## Brief Introduction for Button Functions

Left Stick	Move the Stick to forward / backward / left / right to fly the drone to up / down / turn left / turn right.
Right Stick	Move the Stick to forward / backward / left / right to fly the drone to forward / backward / left / right.
Power Switch	Push up the power switch to turn on the transmitter, and pull down to turn off.
High / Medium/Low Speed button	Press down this button to switch to High /Medium/ Low Speed.
Trimmer mode Button	Press down this button,move the right stick to the required trimmer direction, then it will adjust the direction accordingly, when loose the stick, then ESC from the trimmer mode.
Heading Hold Mode	Press the button to enter heading hold mode, and press again to exit from heading hold mode.
Take Off / Landing / Emergency Stop Button	Press the button and the drone will fly up automatically. Press the button again and the drone will land on the ground automatically. Press and hold the button more than 1s, the drone propellers will stop and fall down immediately.


## VR-2

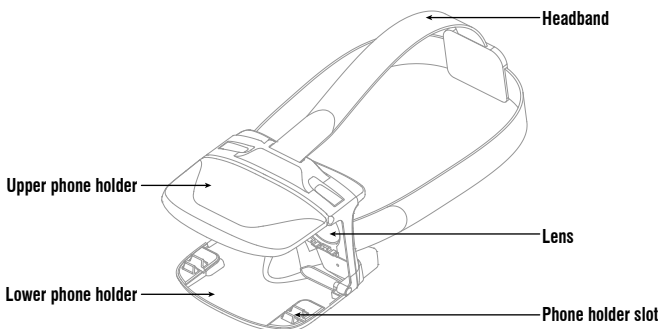

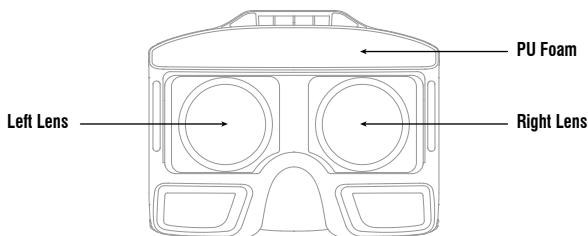

## Battery installation:

Open the battery cover on the back side of the transmitter and put 4 alkaline batteries (AA, not included) into the box in accordance with electrode instructions, as picture shown.

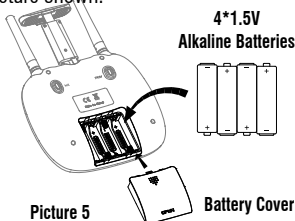

Picture 5




Picture 6

### Notice:


1. Make sure the electrodes are correct.
2. Do not mix new with old batteries.
3. Do not mix different kinds of batteries.
4. Do not charge the non rechargeable battery.

## Phone Installation Instruction:


1. Pull up the phone holder( Picture 7), firstly open the lower clamp(picture 8), then pull the upper holder until can hold the phone.
2. Put the phone into the holder, then release the clamp, the clamp will hold the phone tightly( Picture 9/10).

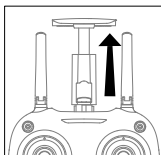


Picture 7

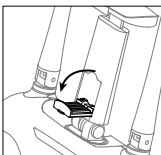

Picture 8

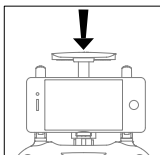

Picture 9

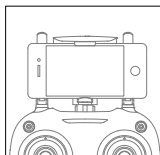


Picture 10


# Pre-flight Operation Instruction

## Frequency Pairing


1. Turn on the transmitter switch (Picture 11) and the power indicator light flashes rapidly. Pull the Left Stick all the way down to the lowest position and then release. The Left Stick will back to the middle position automatically. (Picture 12 / 13) The power indicator light flashes slowly, which indicates the transmitter is ready for frequency pairing.



Picture 11




Picture 12




Picture 13

2. Install the Lipo battery into the drone (Picture 14), power on the drone (Picture 15). ( Press for about 2 seconds)

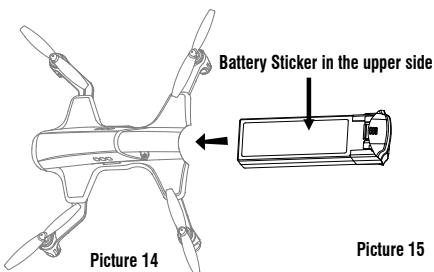

Picture 14

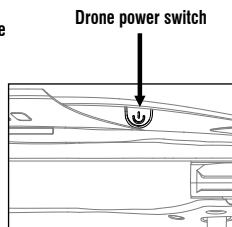

Picture 15


3. Put the drone on the flat surface, the drone body lights turn from flashing to solid bright, which indicates successful frequency pairing.

**Important Notice:** Please make sure the drone is placed on the horizontal position after powering on the drone, so that the drone can work well.

## Checklist before Flight

1. The camera is in front of the drone. Keep the drone front away from you.
2. Power on the drone and check the direction of the rotating propellers. The left front and right rear A propellers rotating clockwise while the right front and left rear B propellers rotating counterclockwise.

3. Activate(unlock) motors: Move the Left Stick and Right Stick at the same time as Picture 16 shown(45 degree inward) to start the motors and repeat previous step again to lock the motors.

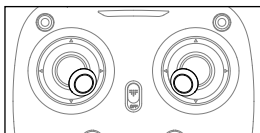


Picture 16

4. After activate the motors, push up the Left Stick slowly to fly up the drone, and pull down the Left Stick slowly to the lowest end, then the drone will land on the ground slowly.
5. It's recommended to repeat above Step 4 to practice.
6. Adjust relative transmitter Trimmer button to adjust the rudder if the drone tilts to one side when flying.


## Calibration Instruction

Please follow below steps to calibrate the drone if the drone becomes imbalance after crashing during the flight, and can not be adjusted by trimmer button and cause difficult operation.

1. Power off the drone, then turn off the transmitter switch.
2. Turn on the transmitter switch, push the Left Stick all the way down to the lowest position (Picture 17) and then release. The Left Stick will back to the middle position automatically (Picture 18). The transmitter is ready for frequency pairing mode.




Picture 17



Picture 18

3. Power on the drone and put it on a flat surface in a horizontal position. The drone body lights change from flashing to solid bright, which indicates successful frequency pairing.
4. Do not move the Left Stick before successful calibration. Push the Right Stick as Picture 19 shown and then release. The drone body lights flash, which indicates that the drone is calibrating. When the drone body lights become solid, which indicates successful calibration.





PICTURE 19

**Notice:** When the drone is fiercely impacted or crashed, it may cause the gyro can not recover and cause difficult control, if so, then you need to power off and power on again to calibrate.

# Flying Control

**Notice:** Every time before the drone take off, move the Left Stick and Right Stick at the same time as Picture 16 shown(45 degree inward) to start the motors. Push up the Left Stick slowly to fly up the drone or press down the one button take off.

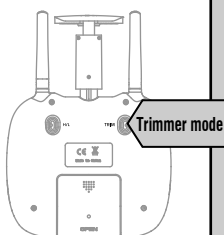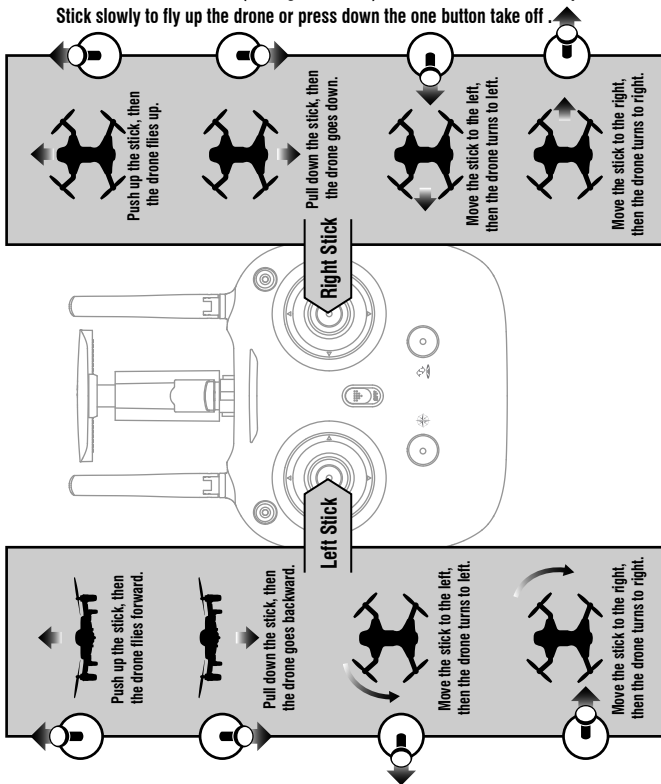

## Forward and backward trimmer

When take off, if the drone tilts forward, press down the trimmer button, and push the right stick backwards. Otherwise push forwards.

## Left and right side flying trimmer

When take off, if the drone tilts to left, then press down the trimmer button and push the right stick to right to adjust. Otherwise push to left.


## Left and right turning trimmer

When take off, if the drone head rotates to left, then press down the trimmer button and push the left stick to right. Otherwise push to left.

# Functions Introduction

## Take off/ One button take off/Landing modes

1. Method 1 (Take off): After frequency pairing successful, push the Left Stick and Right Stick as Picture 16 shown to start the motor and then release. Then push up the Left Stick to fly up the drone to certain altitude and then release the stick.
2. Method 2 (One Button Take Off): After frequency pairing successful or motors activated, press the Take Off / Landing / Emergency Stop Button (Picture 20) , the drone will fly up automatically and keep flying at an altitude of 1.2 meters approximately.

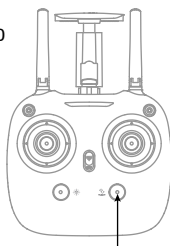

Take Off / Landing /  
Emergency Stop Button  
Picture 20

## Landing Methods


1. Method 1 (Landing): When flying, push the Left Stick all the way down to the lowest position(Picture 15) and hold it till the motors stop and the drone will land on the ground slowly.
  2. Method 2 (One Button Landing): When flying, press the Take Off / Landing / Emergency Stop Button once shortly(picture 20), and the drone will land on the ground automatically. (When using this function, you can not touch the left stick, if not, then the function will fail)
- ▲Emergency Stop: When the drone in emergency situation and going to hit the walking people or obstacle etc., press the Take Off / Landing / Emergency Stop Button immediately and hold it for more than 1s( picture 20). The propellers will stop immediately.

**Tip: Do not use the emergency stop function unless in emergency situation. The drone will fall down suddenly after all propellers stop.**

## Altitude Hold Mode

Altitude hold mode indicates that the drone maintains a consistent altitude while allowing roll, pitch, and yaw to be controlled normally. It makes easier to control the drone for beginner and more stable for aerial photography.


Push the Left Stick up (down) to fly the drone up (down) at certain altitude and then release the Stick. The Stick will back to the center position (Altitude Hold Center) as Picture 21 shown. And the drone will keep flying at current altitude. Repeat above steps if you want to change the drone altitude( Default mode).

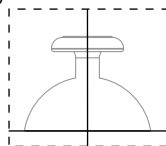

Altitude Hold Center  
Picture 21

## High / Medium/Low Speed Mode Switch

Press down this button, then it will sound “di”, it means low speed mode “L”; when it sounds “di.di”, means medium speed “M”; and sounds “di.di.di” means high speed mode “H”.

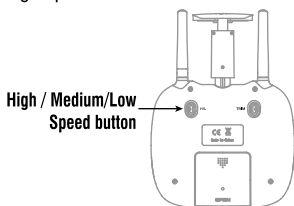

### Low Speed Mode (Mode 1)

1. Low Speed Mode is suitable for beginner.

### Medium speed Mode (Mode 2)

2. Medium Speed Mode is suitable for skillful pilots to play in the gentle breeze.

### High Speed Mode (Mode 3)

3. High Speed Mode is suitable for expert to experience aerial stunt in outdoor.


## Heading Hold Mode

Drones generally have a front and rear indicated by LED lights or colored propellers. By default, the users are required to tell the front and the rear of the drone when flying. Under heading hold mode, the users can operate the drone without worrying about the orientation (left is left and right is right all the time, regardless of where your drone is pointing at). Heading Hold Mode is designed for beginners and the users who fly the drone in daylight or at a far distance or difficult to identify the drone orientation.

The default setting is NOT Heading hold Mode.


You are allowed to activate the heading hold mode function before taking off or in flight. Fly under heading hold mode, you're required to ensure the drone front direction aligned with your front direction, DO NOT change your direction of your transmitter and keep it fly in front of you all the time. (See below picture)

**Warning:** Do not use Heading Hold Mode before you are sure that the drone's front is your front. Otherwise, it might be out of control or fly away.

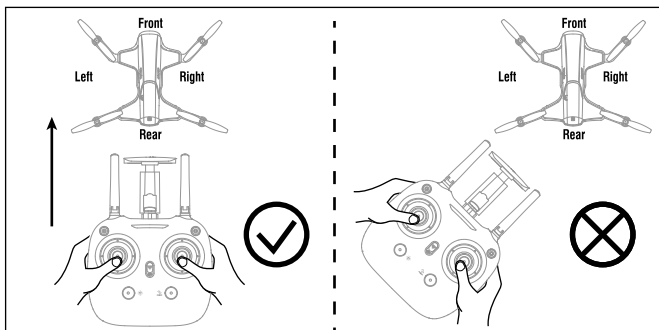

- \* Press down Heading hold mode button, the drone's left and right LED will start flashing alternately, it shows the drone enters Heading hold mode, press the button again, then the LED gets solid and the drone ESC from heading hold mode.

Heading Hold Mode



## Low Battery Alarm

When the transmitter in low battery, the transmitter will beep “di-di” to remind the user to land the drone to replace the batteries as soon as possible. Or the drone may be out of control.

When the drone in low battery, the transmitter will beep” di.di...” constantly to remind the user to land the drone as soon as possible. The flip function will turn off automatically when the drone in low battery.

## Out of Range Alarm

When the drone is going to fly out of the max remote control distance, the transmitter will Beep “didi...didi...didi...” to alarm the user to fly back the drone immediately. Or the drone may be out of control and fly away.

## Motors Stuck Protection

1. When the propellers get stuck, then the drone LED will flash quickly and activate stuck protection function and the motors stop running.
2. Pull down the left stick to the lowest position, the drone LED will get a solid light and stuck protection will be released and the drone can fly again.

## To know your APP

### Download and Install the APP: Flyingsee

The APP is suitable for mobile phone with iOS and Android system, please download from the mobile phone software store:


1. For mobile phone with iOS system, please search Flyingsee in APP Store.
2. For mobile phone with Android system, please search Flyingsee in Google Play.
3. Scan the QR code on the right or the QR code in the box to download Flyingsee.




## Frequency Pairing between Mobile Phone and Drone WiFi:

1. Install the Lipo battery into the drone and power on the drone. Put the drone on the flat surface in horizontal position.




2. Enter “set up” of the mobile phone, turn on WiFi (WLAN) and choose udirc-\*\*\*, return to desktop after successful connection.
3. Click on the icon Flyingsee and click on  to enter remote control interface to experience real time transmission.

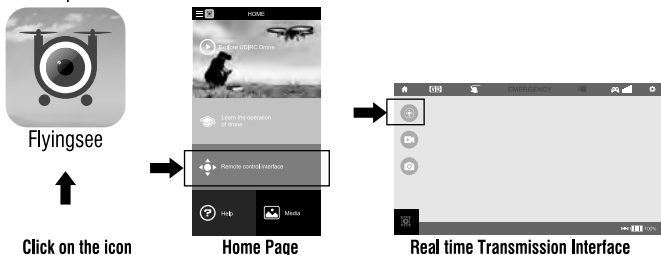


4. Click on  to enter Virtual Control Interface. At this time the drone LED lights change from flash to solid bright, which indicates successful frequency pairing and the drone is ready to be controlled via APP.

**Important Tip:** Ensure the drone is put it on a flat surface in horizontal position so that the drone can work well. Or it may be failed to control.

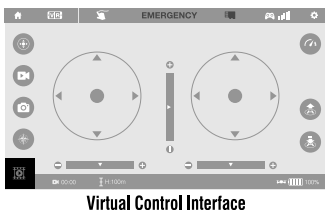

## Introduction for APP Icons

### Home Page Icons

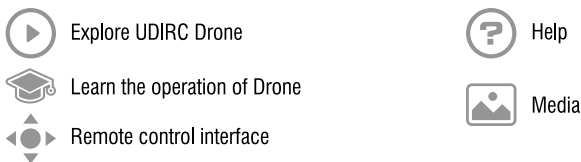

## Remote Control Interface

### Home Page Icon

Click on the icon and back to home page.



## Virtual Reality Mode

Click on the icon to enter virtual reality mode to experience first person view (only available when using with a VR headset). Click on the icon again to exit from virtual reality mode.



## Flight Route Setting Mode

Click on this icon and it turns red. Draw a flight route in the right area. The drone will fly according to the flight route. Click on the icon again to exit from Flight Route Setting Mode. The icon turns white.

## EMERGENCY



### Emergency Stop

The icon is red by default. Click this icon and the propellers will stop immediately. The drone will fall down to the ground straightly.

**Tip: Do not use the emergency stop function unless in emergency situation.**



## SD card Icon

When not yet insert the SD card to the drone camera, then the icon will show , when the SD is in, then the icon shows .




## Remote Control Signal

To show the drone's WiFi signal strength.



## Setting

Click on this icon to set some parameters as below, and click again to exit.

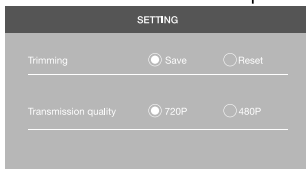

Click on "Save" to save trimming setting. Choose "Reset" for factory reset.

Select "720P" transmission quality



## Remote Control




### Virtual Control Stick

The virtual control stick is hidden by default. Click on the icon to turn on the virtual control stick.





### Gravity Induction Mode


Click on this icon to enter gravity induction control mode. (only available for flying left / right and forward / backward). Click on the icon again to exit from gravity induction control mode.

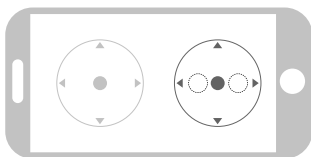

If the mobile phone shakes to the left / right, the Right Ball will move accordingly causing the drone to fly left / right.

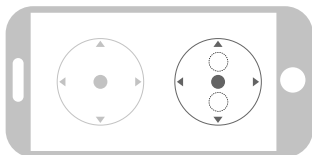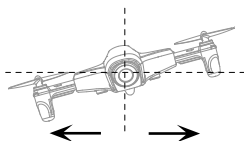

If the mobile phone shakes to forward / backward, the Right Ball will roll forward / backward, causing the drone to fly forward / backward.

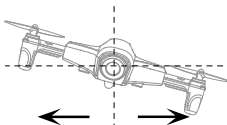

### Video

Click on this icon to record video. The recording time will show at the bottom of the screen. Click on this icon again to finish recording.



### Photo

Click on this icon to take photo.



### Heading Hold Mode

Click on this icon and it turns red, which indicates that the drone enter Heading Hold Mode. Click again to exit from Heading Hold Mode. The icon turns white.



### Media

Click on this icon to view or delete the aerial video and photo. Click on the arrow to exit.



### High / Low Speed Mode

By default, the drone is in Low Speed Mode "L". Click on "H" to enter High Speed Mode.



### One Button Take Off

Click on this icon and it turns red shortly. The drone will fly up automatically and stay flying at an altitude of 1.2 meters.



### One Button Landing

Click on this icon and the icon turns red, the drone will fly down slowly and land on the ground. All propellers also will stop running.



H:0.1m

### Altitude hold icon

It indicates the drone's altitude position(As per calibration level)




## Drone battery status icon

When the drone battery capacity left around 15%, the phone will vibrate to alarm that the battery is going to run out and you need to fly back and replace the battery.


## APP Calibration Instruction

If the drone becomes difficult to operate and hover, you need to calibrate again.



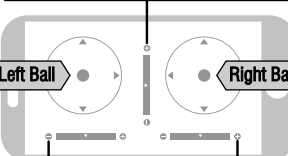


1. Please refer to the Frequency Pairing between Mobile Phone and Drone WiFi.
2. Do not push the Left Ball before successful calibration. Move the Right Ball as the picture shown on the right. The drone body front light flashing, which indicates that the drone is calibrating. When the drone body front light gets solid, which indicates successful calibration and the drone is ready to be controlled.

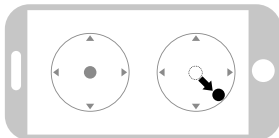

## APP Flying Control

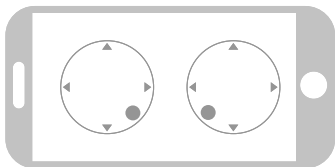


Hold left/right ball (refer to left picture) to push inward both 45 degree and activate the motors or press one button take off to activate the motors. The drone is ready to fly.


 <p><b>To fly up or down:</b> Move the Left Ball up to fly the drone up and move the Left Ball down to fly the drone back down.</p>  <p><b>To rotate left or right:</b> Move the Left Ball to the left to rotate the drone to the left. Move the Left Ball to the right to rotate the drone to the right.</p>	<p><b>If the drone tilts forward or backward</b> Click the “-” of the Forward / Backward Trimmer to adjust the drone till balance if the drone tilts forward. Click the “+” to adjust the drone till balance if the drone tilts backward.</p> <div style="text-align: center;">  <p><b>Left Ball</b>      <b>Right Ball</b></p> </div> <p><b>If the drone rotates to left or right</b> Click the “+” of the Rotation Trimmer till balance if the drone rotates left. Click the “-” to adjust the drone till balance if the drone rotates right.</p> <p><b>If the drone tilts to the left or right</b> Click the “+” of the Left / Right Trimmer till balance if the drone tilts to the left. Click the “-” to adjust the drone till balance if the drone tilts to the right.</p>	 <p><b>To fly right or left:</b> Move the Right Ball to the left to fly the drone to the left, and move the Right Ball to the right to fly the drone to the right.</p>  <p><b>To fly forward or backward:</b> Move the Right Ball up to fly the drone forward, and move the Right Ball down to fly the drone backwards.</p>
---	--	--

**Notice:**


1. If you can not find the WiFi signal to connect, turn off WiFi and turn on again to search and connect.
2. The available WiFi control radius/distance is 40m, please control the drone within this range.
3. When alternating control from mobile phone to transmitter, the transmitter left stick must be in the center position, or exit from the APP. If not then you can not control the drone alternately.

## VR-2 Operation Instruction


1. Turn on App(please refer to the drone user manual for app instruction) and enter the control interface. Click on  to enter split screen mode(Picture 22).

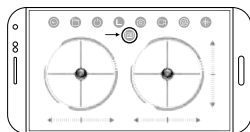

Picture 22

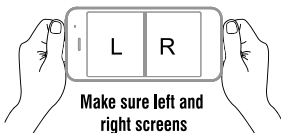


2. Tear off the protection film of the lens. Open the mobile phone holder and holding it.(Phone screen should face to the lens)( Picture 23), adjust the mobile phone to the best viewing position and then release the upper holder.

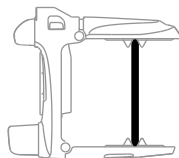


Make sure the VR center line overlapping

Picture 23


3. Adjust the headband: Take out the headband and put into VR-2(Picture 24), adjust the tightness of the three headbands to the most comfortable position. (In order to facilitate adjustment, the magic tape of three headbands should face outwards.)

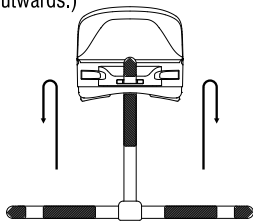

Picture 24

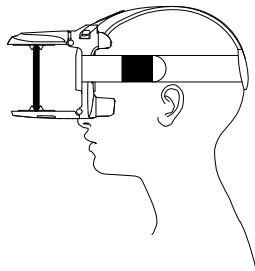

4. Adjust the focal length: After putting in the phone, if there is double image, move the lens to the proper position till the image is clear( Picture 25).

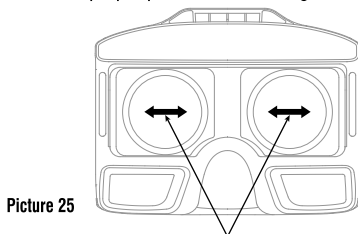


Picture 25


**For short-sighted user, please move the lens by left or right until proper pupil distance.**

5. Shade cloth: When the light is too strong to view the video clearly, hitched the VR glasses by the shade cloth(Picture 26) to protect the screen from strong lights.




Picture 26

6. To exit from split screen mode: Click on the screen and  icon appears. Click on this icon to exit from split screen mode and return to operation interface.

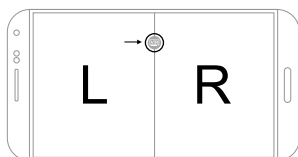

Picture 27


## Display the photos and video

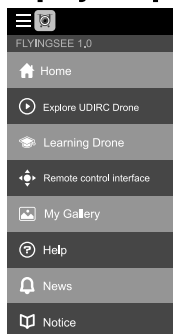

Main menu



To view the photos and videos.

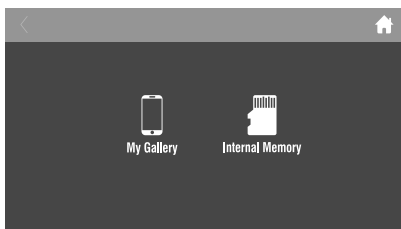

Media interface


**Notice:** App must be authorized to access the phone gallery, if not, then may be unavailable to display the video and photos.

The photos are stored in the local phone gallery and TF card, the video is only stored in the TF card, you need to download the video to the phone gallery and display it. Please download the video as per APP instruction.

## To take photo and record video

1. Insert the TF card to the slot in accordance with Picture 37. Make sure the metal side of the card faces up as the picture.
2. The aerial photo will be saved in your mobile phone and the TF card, while the video only be saved in the TF card. But you can download the video to the mobile phone only when the mobile phone connecting with the drone WiFi and the TF card in the drone.

**Tip:** Click on the video icon to save a video when ending recording, or the video cannot be saved.

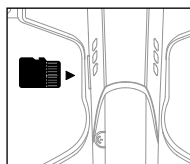

Picture 37

3. Power off the drone first when finish aerial photography. Take out TF card and insert the card to a card reader. Connect the card reader with computer USB port. After a while, view the aerial photography data from "my computer" - "mobile disk".


**Tip:** Please play the video or photo after coping all aerial photography data to computer and make sure the play software can support AVI format.

Basic parameter for aerial camera: Video DPI 1280\*720P  
Image Size 1280\*720P.


# Spare Parts Installation Instruction

## Propeller Installation Diagram


1. When disassemble, insert the wrench between propeller and motor( picture 28), press down the wrench and pull up the propeller in the vertical direction (Picture 29/30).

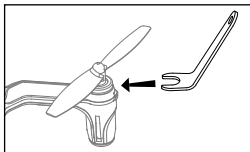

Picture 28

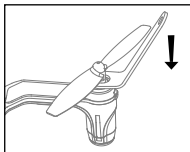


Picture 29

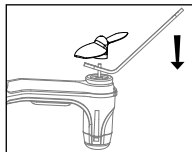


Picture 30

2. When assembly, put the propeller hole aim at the motor shaft and press down ( picture 31). Installed propellers bottom should be in the same surface level of the motor housing( picture 32). (Please make sure correct propellers rotating direction)

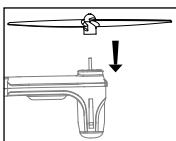


Picture 31

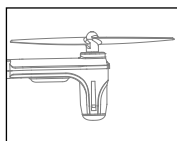


Picture 32

## Motors replacement diagram


1. When disassemble as per above picture 28/29/30, remove the propeller, and then remove the screw of motor holder( picture 34), pull out the motor holder, unplug the motor connector and then take out the motor.
2. Plug the required motor connector into the motor socket( Picture 33),and put the motor into upper holder and then lower holder, and tighten the screw ( picture 35), finally as per above picture 31/32 to install the propeller.



Picture 33

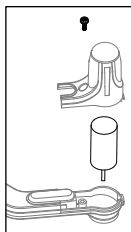

Picture 34

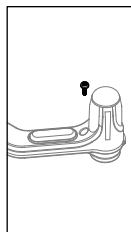

Picture 35

**Notice:** The motor's rotating direction should be the same, if not it will not work.




## Battery installation diagram

When disassemble, you need to squeeze up and down of the battery buckle and then pull out the battery( picture 36).

When assemble, put the lipo battery aim at the drone battery slot, push into the position is fine(Refer picture 14)



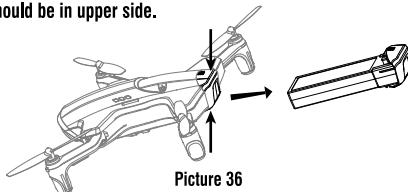









**Notice:** When assembling, please take care of the Lipo battery direction and the battery sticker should be in upper side.



Picture 36

## Spare Parts

For convenience, the spare parts are listed for you to choose, which can be purchased from the local seller.

			
U29-01 Drone cover housing	U29-02 Drone bottom housing	U29-03 A propeller	U29-04 B propeller
			
U29-05 Right front bracket set	U29-06 Right rear bracket set	U29-07 Left front bracket set	U29-08 Left rear bracket set
			
U29-09 Motor holder	U29-10 Camera head cover	U29-11 Lens clamp	U29-12 LED hood



**U29-13**  
**Battery upper holder**

**U29-14**  
**Battery lower holder**

**U29-15**  
**Front self-locking key**

**U29-16**  
**Rear self-locking key**

**U29-17**  
**Cushion**




**U29-18**  
**Spring**

**U29-19**  
**Clockwise motor**  
**( Red and blue wire )**

**U29-20**  
**Counter-clockwise motor**  
**( Black and white wire )**

**U29-21**  
**Receiver board**

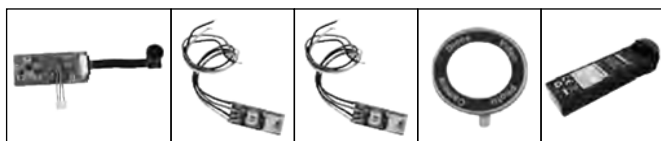

**U29-22**  
**Camera board**

**U29-23**  
**Front LED board**  
**( Green )**

**U29-24**  
**Rear LED board**  
**( Red )**

**U29-25**  
**Lens**

**U29-26**  
**Drone Lipo battery**



**U29-27**  
**USB Cable**

**U29-28**  
**TF card**

**U29-29**  
**Card reader**

**U29-30**  
**Spanner**



**U29-31**  
**Hex Wrench**

**U29-32**  
**Screwdriver**

**U29-33**  
**Transmitter**

**U29-34**  
**VR-2**

### **Important Notice**

Our company's products are improving all the time, design and specifications are subject to change without notice.

All the information in this manual has been carefully checked to ensure accuracy, if any printing errors, our company reserve the final interpretation right.

# Troubleshooting Guide

No.	Problem	Problem Cause	Solution
1	The transmitter indicator light is off	1. Low battery.	1. Replace the transmitter battery.
		2. The battery positive pole and negative pole are in reverse order.	2. Install the battery in accordance with the user manual.
		3. Poor Contact.	3. Clean the dirt between the battery and the battery slice.
2	Fail to pair the drone with transmitter	1. Indicator light is off.	1. The same as above 1.2.3.
		2. There is interfering signal nearby.	2. Restart the drone and power on the transmitter.
		3. Misoperation.	3. Operate the drone step by step in accordance with the user manual.
		4. The electronic component is damaged for frequent crash.	4. To buy spare parts from local seller and replace damaged parts.
3	The drone is under-powered or can not fly.	1. The propeller deformed seriously.	1. Replace the propeller.
		2. Low battery.	2. Recharge the drone battery.
		3. Incorrect installation of propeller.	3. Install the propeller in accordance with the user manual.
4	The drone could not hover and tilts to one side.	1. The propeller deformed seriously.	1. Replace propeller.
		2. The motor holder deformed.	2. Replace the motor holder.
		3. The gyro did not reset after violent crash.	3. Put the drone on the flat ground for about 10s or restart the drone to calibrate again.
		4. The motor is damaged.	4. Replace motor.
5	The drone indicator light is off.	1. Low battery.	1. Recharge the drone battery.
		2. The battery is expired or over discharge protection.	2. Buy a new battery from local seller to replace the battery.
		3. Poor contact.	3. Disconnect the battery and then connect it with the plug again.
6	Could not see the picture.	1. Did not connect the wire of camera box or poor contact.	1. Check the wire and connect well.
		2. There is interfering signal nearby.	2. Cut off the wire and re-connect.
		3. Damaged camera.	3. Buy a new camera box from local seller to replace.
7	Hard to control by cellphone.	Not experienced enough.	Practice and read the cellphone controlling instruction carefully.
8	Double image when using VR	Lens focal length is not correct	If there is double image, move the lens to the proper position till the image is clear.

# FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide residential protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on the circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC WARNING:

The equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. Modifications not authorized by the manufacturer may void user's authority to operate this device.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



**MADE IN CHINA**



[www.udirc.com](http://www.udirc.com)